

Safety and Assembly Instructions



100cm Nest Swing Tent Attachment

Weight Capacity: Not Weight Bearing

(Designed for shading / enclosure, with minimal weight applied to the tent attachment)

Attachable by 1 or 2 points.

We hope you enjoy this tent attachment, matched with suitable 100cm circular nest swing with 4 suspension ropes.



You can set up the attachment, no matter if your nest swing is set up from 1 or 2 points.

Attaching your Tent Attachment



1. Align the indents in the canvas to go around the suspension rope bolts.



2. Align the door opening to be between the 2 sets of ropes.



3. Attach the 4 Velcro straps to the nest swing circle.



4. If your nest swing is set up from 2 points, then attach the tent's 2 top straps to the 2 O-rings of the nest swing.



5. If hanging from 1 point, then attach the 2 straps to 1 or 2 O-rings, but in the center.

Safety instructions

Follow the usual safety instructions of the swing you're attaching it you, plus the following:

- Double check that the setup is connected correctly and tightly.
- Supervise any children using the swing and attachment, particularly:
 - Make sure they do not hang from the attachment. The weight should be on the swing.
 - They should not use it in a way where they could become tangled in the ropes or attachment.
 - They should get on and off safely, and make sure they use it in a safe manner.

Maintaining the Attachment

At the beginning of each play season, adults should

- The material is Oxford Polyester, which is water and weather resistant. However, to maximize the life, it's better not to leave it in strong UV and rain permanently. It can be kept in a dry and shaded area when being stored.