

# Safety and Assembly Instructions

## IMPORTANT

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE



**WARNING!**  
CHOKING HAZARD-SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.  
MAXIMUM WEIGHT SHOULD NOT EXCEED 100KG.  
DO NOT USE WITHOUT ADULT SUPERVISION.  
ADULT ASSEMBLY REQUIRED.

## ESSENTIAL INFORMATION

- Recommended for children 3+ years
- Do not leave child unattended while in use
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times
- Read all instruction before using this product.

Hanging hardware not included. Ideally, the swing body should be hung over grass, sand, wood chips, or other soft surfaces. It should not be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 40cm.

Please be sure to examine the material regularly to check for wear. Material will, in time, degrade. Equipment should be hung in such a way that a distance of at least 1.5m is clear on either side. Can be hung on a frame, swing set, beam or tree limb of a diameter of at least 25cm.


## Assembling your swing







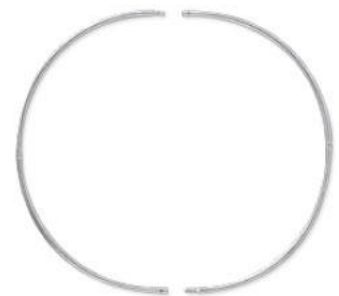

1. The hangout arrives with the material, rings & bolts separate. The bolts may be taped to the disassembled rings, or may be taped onto the inside of the carton cover in a plastic bag.



2. The large ring and small ring will each have 4 pieces.



3. Do the large ring first by bolting it into 2 halves.

		
<p>4. Slide one half into the sleeve and Velcro tunnels. Slide the other half into the other side.</p>	<p>5. Bolt them together to form a full circle.</p>	<p>6. Do up the Velcro and the first ring is finished.</p>
		
<p>7. Repeat for the smaller ring, putting it in the top of the hangout.</p>	<p>8. It's ready to be attached to your hangout point.</p>	<p>9. Assembly is finished and ready to use.</p>

## Ensuring Safety of the Swing

Clearance distance should be 1.5m around the swing. The swing is not intended for strong swinging, but it's good to keep the area clear anyway.

An adult should check that the child can get in and out safely.

A fall onto a hard surface can result in serious injury to the equipment user.

Do not use the equipment until properly installed.

This swing is not to be used in any other manner other than its intended use.

Adult supervision is required.

Adults should verify that the inside and outside of the swing are in safe and working order.

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing if using it alone.

It is important for adults to instruct children **NOT to**

- Walk close to, in front of, behind, or between moving items
- Excessively spin the hangout, in effect, twisting the hanging accessories and material.
- Get off the sing while it is in motion
- Climb on the swing when it is wet.
- Attach additional items to the swing.

## Maintaining the Swing

At the beginning of the each play season, adults should:

- Check and tighten hardware if necessary.
- Check all protective coverings on pipes, edges, and corners, Replace if they are loose, cracked, or missing.
- Check all moving parts including swin, straps for wear, rust, or other deterioration, Replace as needed.
- Check metal parts for rust, if found, and repaint using a non-lead-based paint meeting the EN71 requirements.
- If the swing is hung from swing set frame, then lubricate all metallic moving parts that are attached by a metal connection.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials(such as mulch or sand) to prevent compaction and to maintain appropriate depth(Min amount is 25cm), replace as needed.

At the end of each play season, or when the weather is bad, adults should:

- Remove the swing from its outdoor location.
- Store the swing in a dry environment, and out of extreme UV.

### **Disposing of the swing**

To dispose of the swing, first disassemble it, Dispose of it in such a way that no unreasonable hazards will exist at the time that the swing is discarded.