

USER MANUAL

Comfy Cocoon Freestanding Nest Swing



Find the Digital
Manual Online



WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

This product may contain sharp points and small parts prior to assembly. The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

NOTE:

This manual should not be used to guide your purchasing decision. Your product, and the contents inside its carton, may vary from what is listed in this manual. This manual may also be subject to updates or changes. Updated manuals are available through our website at www.lifespankids.com.au.

TABLE OF CONTENTS

I. GENERAL SAFETY INSTRUCTIONS	3
II. ASSEMBLY INSTRUCTIONS	5
III. MAINTENANCE	6
IV. CLEANING	9
V. WARRANTY	9

I. IMPORTANT

Please Read Before Use

1. Read Carefully: Please read all instructions before installing or using the swing.
2. Installation: Attach the swing securely to the swing clamps on your swing set.
3. Rope Adjustment: Adjust the rope to achieve the correct hanging height.
4. Minimum Ground Clearance: Ensure the swing seat is at least 35 cm from the ground.
5. Frame Clearance: Leave at least 30 cm between the swing and the frame.
6. Clamp Spacing: Swing clamps should be spaced 45 cm apart.
7. Accessory Spacing: Maintain at least 45 cm between each swinging accessory.
8. Installation Check: Carefully test the swing by applying pressure (e.g., hang from the rope) for a few seconds to ensure secure installation.
9. Maintenance: Refer to the user manual for routine inspection and maintenance guidelines.
10. Usage Limitations: For private domestic use only. Maximum user weight is 150 kg.
11. Age Restriction: Not suitable for children under 3 years old.
12. Keep for Reference: Store these instructions for future use.



WARNING: To be assembled by an adult.

WARNINGS!

Only for domestic use.

Maximum user weight is 150 Kg.

Suitable for children from 3-10 years.

GENERAL SAFETY INSTRUCTIONS

Safe Play Area

- A safe play zone should extend at least 200 cm from all sides of the play set.
- The area in front of and behind swings must also extend 200 cm.
- Keep the safe play area clear of all obstacles, such as fences, buildings, trees, laundry lines, electrical wires, or other hazards.
- Do not install the play set near walkways or passageways.

Ground Surface

- Install the play set on a level surface only. Uneven or sloped ground can cause the structure to lean, putting stress on joints and fasteners, leading to potential failure.
- Do not install over hard surfaces such as concrete, gravel, asphalt, or compacted earth—falls on these surfaces can result in serious injury.
- Recommended ground covers (minimum 50 cm depth):
 - * Double-shredded bark mulch
 - * Uniform wood chips
 - * Fine gravel
 - * Fine sand

Safe Play Guidelines

- Adult supervision is required at all times for children of all ages.
- Teach children how to play safely and responsibly.
- Dress children appropriately—avoid drawstrings, loose clothing, necklaces, or bike helmets that can snag on equipment.
- Use common sense to avoid unsafe situations.
- Do not use the play set:
 - * In wet or icy conditions
 - * When temperatures fall below 0°C (accessories should be removed and stored indoors)
- Misuse of the equipment may result in injury or damage. For example:
 - * Do not twist, wrap, or tangle swings, chains, or ropes.
- Children should be cautioned:
 - * Not to jump off swings while in motion
 - * Not to swing empty seats or accessories
 - * Not to swing at an angle
 - * Not to hang upside down on any part of the structure
 - * Not to interfere with other children on moving equipment
 - * Not to walk too close to moving accessories
 - * To sit centered with full weight on the swing seat (one child per seat)
 - * Not to climb or hang from the play set frame

Inspection & Maintenance

- Inspect at the start of each season, and at least twice per month during use.
- Check all hardware to ensure it is secure—do not overtighten as this can damage timber components.
- Inspect for rust on hardware, brackets, and swing clamps; replace any compromised parts.
- Verify all ground anchors are firmly secured; reposition or replace if needed.
- Check for stability of the play set.
- Regularly inspect surroundings for hazards (e.g., overhanging branches, debris).
- Clean accessories with mild detergent and warm water.

Customer Responsibilities

- It is the customer's responsibility to:
 - * Perform regular inspections and maintenance as outlined above.
 - * Take all necessary precautions to ensure the safety of children using the equipment.

II. ASSEMBLY INSTRUCTIONS



1. Included in the Box:

- 1x Swing body
- 4x Foam-covered poles
- 2x Half-circle poles
- 1x Chain
- 1x Inflatable cushion
- 1x Air pump

2. Open the zipper on the bottom of the swing and insert the inflatable cushion inside.



3. Inflate the cushion with a pump.



4. Connect the two half-circle poles to form the top ring of the swing.

Slide one half-circle pole through the inner top sleeve of the swing.



5. Slide the second half-circle pole into the top sleeve. Connect the two half-circle poles by inserting the small socket into the larger socket, and secure them using the spring button.

WARNING:

Don't forget to thread the half-circle pole through the webbing loop as shown in the diagram.

If you're having trouble connecting the two half-circle poles, try positioning each end at a right angle to the other, with the open ends touching. Then push them together firmly until they snap into place.



6. The 4 foam-covered poles form the bottom ring of the swing.

Slide each foam-covered pole through the bottom sleeve of the swing.



7. Repeat this process with all four foam-covered poles.

Connect each pair by inserting the small socket into the larger socket and snapping them into place.



8. Now you can hang the swing onto any compatible swing hardware or attachment point.

WARNING: Ensure that the structure you are attaching to is also checked or reinforced to support your weight and swing.

III. CLEANING

Do not use any abrasive cleansers for the cleaning. Use a soft, damp cloth to eliminate dirt and dust.

IV. WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at **www.consumerlaw.gov.au**.

Please visit our website to view our full warranty terms and conditions:

www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit **www.lifespankids.com.au/warranty-form**

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit **www.lifespankids.com.au/warranty-form** and fill in our Repair/Service Request Form or Parts Purchase Form.

