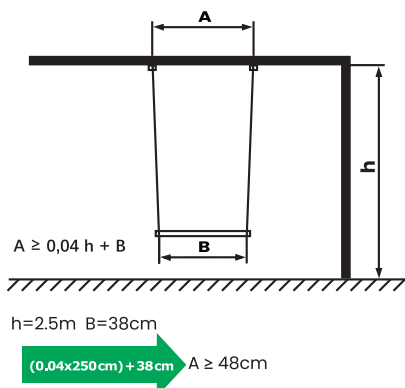 

FIG. 1

NOTE: The product as shown in Fig. 1 is only suitable for children from 9 months to 36 months of age, because the child needs to be able to sit upright unaided and the dimensions and construction of the product are not suitable for children older than 36 months of age.




FIG. 2 & FIG. 3 The product as shown in Fig. 2 & 3 is unsuitable for children younger than 36 months of age, due to a lack of extra safety precautions and taking into account the limited mental capacities of toddlers.

FIG. 1


A distance between the suspension points along the crossbeam.

B distance between the junction points of the swing element and the means of suspension

 h distance from the ground to the lower side of the crossbeam.

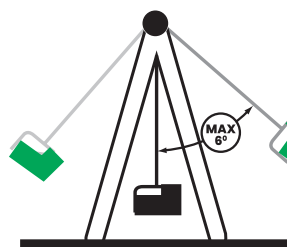


WARNING! Pushing the seat too strongly forward, specially above the indicated maximum angle (see figure), is dangerous and could lead to tipping the seat over. As result the child could fall out of the seat!

ADJUSTING SEAT HEIGHT


1. Adjust the ropes under the seat:

Tie a knot 800mm from the end of the rope. For the excess rope you can wrap it around using a heaving line knot.

 Example: Heaving line knot

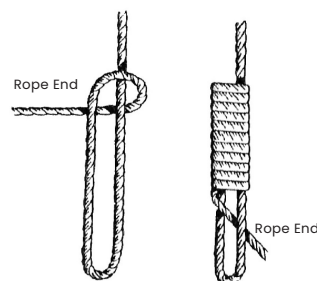

2. Adjust the ropes on the buckle

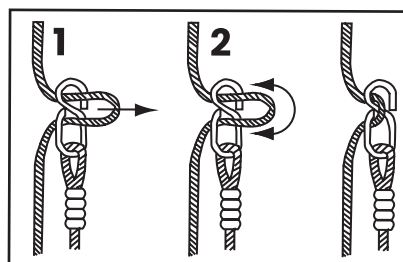 

FIG. 1

USER MANUAL

Haven 3 Stage Swing Seat Green/Blue



 Find the Digital Manual Online

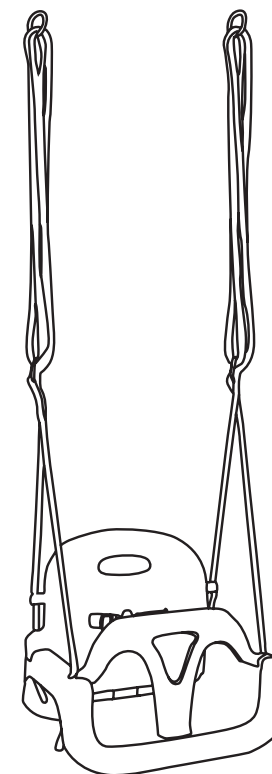

WARNING: The disassembled product may contain small parts which pose a choking hazard to children under 3.

IMPORTANT:

The owner's manual contains safety, assembly, use and maintenance instructions. This product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

For the installer and your children's safety, it is important to fully read and understand the instructions and safety hazards before commencing the assembly of the product.

SAFETY INSTRUCTIONS

- Keep these instructions for future reference.
- Do not modify the product—this affects safety and voids liability.
- Strap must be attached to the seat and fastened during use.
- Adult supervision is required at all times.
 - FIG. 1: For children 9–36 months (must sit upright unaided)
 - FIG. 2 & 3: For children 36+ months only
- For domestic use only, indoors or outdoors.
- Ensure supporting structure can handle user weight.
- Keep at least 2m clear from obstacles (fences, branches, clotheslines, etc.).
- No hard or sharp objects nearby; install on flat, shock-absorbing ground. Avoid concrete or asphalt. Store indoors during winter.
- Suspension points must be wider than the seat's junction points + 4% of beam height (see FIG. 1).
- Only use swing hooks with nylon bearings. No rigid metal rings.
- Swing seat must hang 35–40cm off the ground, with 45cm side clearance.
- Max crossbeam height is 2.5m. Do not allow climbing.
- Check all parts regularly. Contact your supplier for replacements.
- See FIGS 1–3 for user setup, rope adjustments (seat must hang level), and disassembly.
- One child per seat only.
- Never leave children unattended.
- Teach children safe use:
 - Stay clear of moving swings
 - Sit only—no standing, jumping, or twisting
 - Don't push empty swings

MAINTENANCE

This product is for domestic family use only, indoors or outdoors.

Inspection frequency depends on usage, materials, and environment (e.g. heavy use, vandalism, coastal air, pollution, equipment age). Pay special attention to swing hooks, rings, eights, plastic welds, ropes, and oil moving metal parts regularly.

ROUTINE VISUAL INSPECTION (Weekly to Monthly)

 
- Ensure bolts and nuts are tight
- Clear shock-absorbing surface of debris
- Check for missing parts
- Ensure proper ground clearance

OPERATIONAL INSPECTION (1 to 3 months)

- Check construction stability
- Inspect all parts for wear and replace if needed

ANNUAL INSPECTION (1–2 Times Per Year)

- Check for rust or corrosion
- Inspect all parts for wear and replace if needed

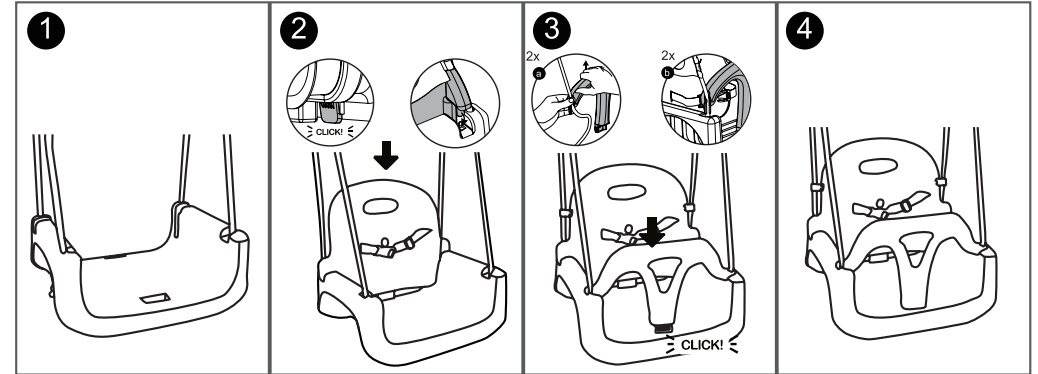

WARRANTY

AUSTRALIAN CONSUMER LAW

Many of our products come with a guarantee or warranty from the manufacturer. In addition, they come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Full details of your consumer rights may be found at www.consumerlaw.gov.au.

Please visit our website to view our full warranty terms and conditions:
www.lifespankids.com.au/Warranty-Policy-Kids

WARRANTY AND SUPPORT

Any claim against this warranty must be made through your original place of purchase. Proof of purchase is required before a warranty claim may be processed. If you have purchased this product from the Official Lifespan Kids website, please visit www.lifespankids.com.au/warranty-form

For support outside of warranty, if you wish to purchase replacement parts or request a repair or service, please visit www.lifespankids.com.au/warranty-form and fill in our Repair/Service Request Form or Parts Purchase Form.