

Safety and Assembly Instructions


ESSENTIAL INFORMATION

- Recommended for children 3+ years
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times.
- Read all instruction before using this product.
- Maximum weight capacity: 500KGS.

Comes pre-assembled. Setup only required to attach the removable extension chains and to attach it to suitably strong hanging points.

Hanging

It is suggested to attach the swing to 2 hanging points with ropes angled outwards slightly, like in the picture below. It's also possible to attach it to a single point to allow spinning.

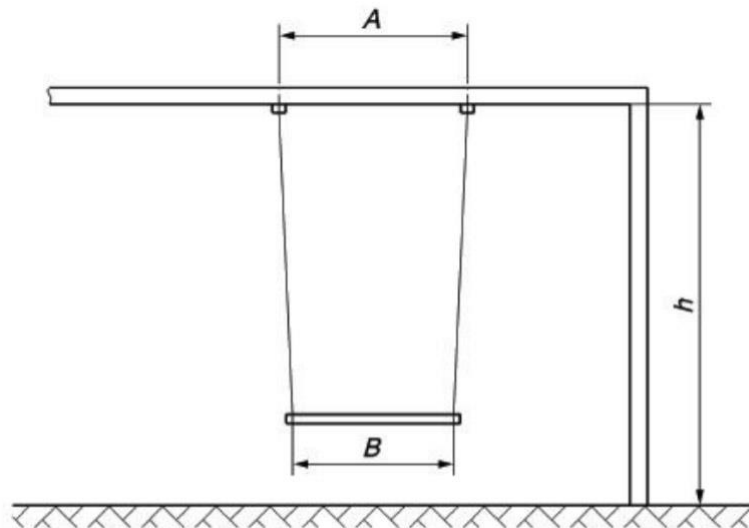

Consider the setup, it should be:

- Above a soft surface
- At a suitable height that is easy to get on, and reduces the risk of falling from height.
- Far enough from objects or hazards, so the swing won't bump into anything, or push somebody into anything eg. trees, poles, walls.
- The hanging points should be suitably strong. If hanging from a stand, it should also be suitably strong. The 500kg weight limit only applies if hung from an equally strong hanging point.
- Check the strength of the setup before use.

Other Safety Tips

- The swing is heavy at 22kg. It will therefore have a lot of momentum when swinging. People should not stand near or in front of the moving swing.
- Avoid sitting in a way which could have the person fall off eg. backwards near the sides. Sitting in the middle is better.
- Do not jump off the moving swing.
- It may be unsafe to use when wet eg. due to slipping.
- Wear only safe clothes eg. no scarves which could become entangled and become a

choke hazard.

- Do not attach additional objects to the swing, such as buntings.
- Sitting and laying is safer than standing.

Maintaining the Swing

- Avoid wearing sharp clothing or holding sharp items that could damage the swing eg. metal buttons or toys.
- Being set up under a shade can be optimal, but is not necessary.
- Check the swing, ropes, chains for wear.
- Apply lubricant to metal parts if necessary.
- Avoid damaging the tape which covers the ends of the seat ropes.



- Regularly check that the bolts remain tight. For example, these ones around the middle net use M6 hex socket head cap screws, and serrated flange nuts. If they need tightening, they can be tightened with a 5mm Allen key.

