


For ages 5 and up.
 Holds up to 4 kids; maximum weight capacity: 400 lbs.
 Adult assembly and installation required.
 Takes 2 adults approximately 30 minutes to assemble.

Platform Swing

Safety and Assembly Instructions

Make sure you have all the necessary parts:


- 2 long curved steel poles
- 2 short straight steel poles
- 2 sets of 2 thick plastic corner connectors with rope attached
- 16 screws with washers
- 2 Allen wrenches
- 1 polypropylene mesh mat

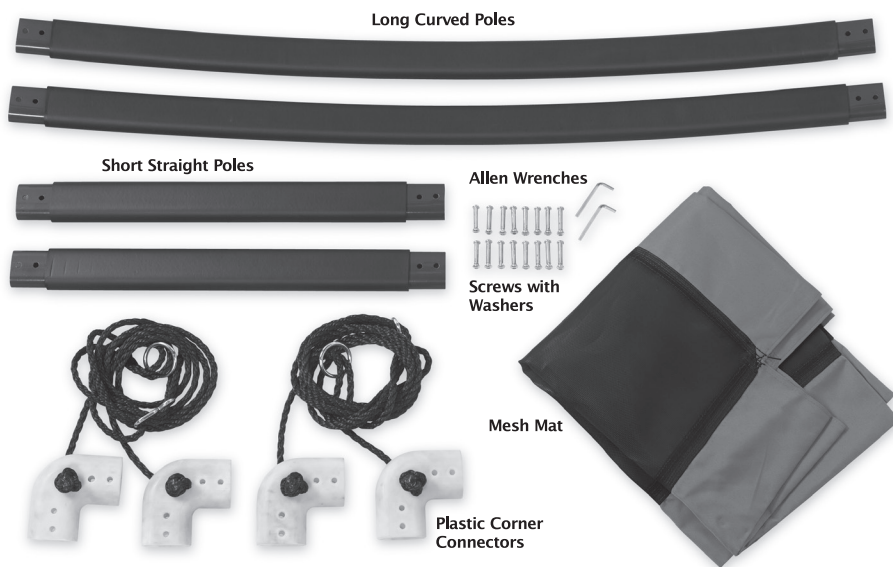

Please note: The SkyCurve Platform Swing is intended solely for family and domestic use, not for a commercial playground or daycare.

Hanging hardware not included. Hang the SkyCurve Platform Swing on level ground, not less than 6' (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires. Ideally, the Sky- Curve Platform Swing should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 18". Children must not use the SkyCurve Platform Swing until it has been properly installed. Can be hung on an A-frame or swing set or on a tree limb of a diameter of at least 10"-12".


Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the rope looks pale, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the swing.

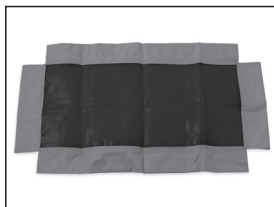

1. Lay mat out on the ground.



2. Slip the two long poles into the mat's two long sleeves, making sure the pole curves are going the same way.

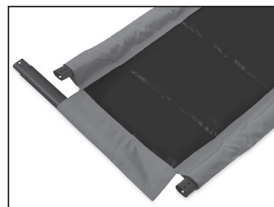

3. Slip one short, straight pole into a short sleeve at one end of the swing.




4. Working at the end with the short pole, connect a plastic corner connector to the end of one long pole and one end of the short pole. (Make sure the large knots are on the swing's bottom.)




5. Use the corner connector from the second set of corner connectors (i.e., with a different rope attached) to connect the other long pole to the other end of the short pole.



6. Loosely screw each corner connector to the poles: push the long end of the screws up through the bottom of the connector (where the knot should be) and screw the short end down from the top.

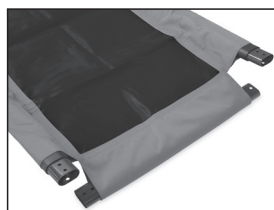

7. Moving to the other end of the swing, slide the short pole into the short sleeve.

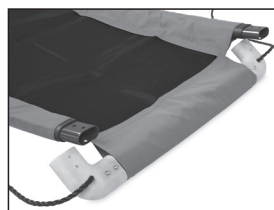

8. Screw the two remaining corner connectors loosely to the ends of the remaining short piece, making sure knots are facing downward.



9. Invite a second person to help with attaching this short piece to the swing. Have each person grasp a corner connector in one hand and a long rail in the other. Simultaneously join the ends while aligning the holes so the ends "snap" into place. Tighten all screws, and enjoy!