

Safety and Assembly Instructions

Padded Stand



WARNING!

Weight Capacity: 250KGS

(Though if the swing capacity is lower, then you follow that limit instead)


Hanging Points Adjustable Horizontally

We hope you enjoy this swing set stand, matched with suitable swing(s).

Stand Photo



Stand Diagram

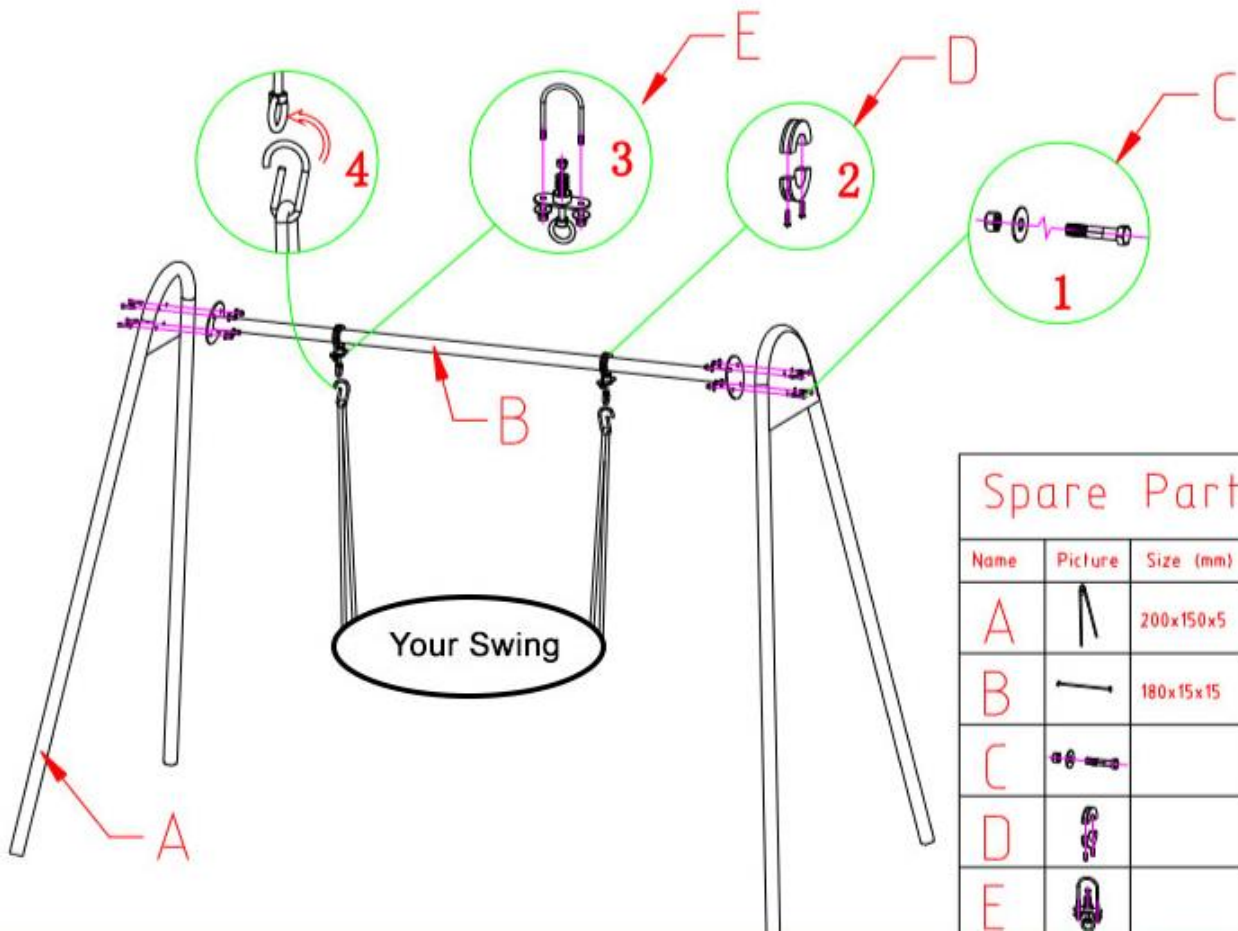

Spare Parts List				
Name	Picture	Size (mm)	Quantity	Remarks
A		200x150x5	2	
B		180x15x15	1	
C			8	
D			2	
E			2	

Assembling your stand



1. The legs are bolted to the crossbar, with 4 bolts on each end. The recessed part of the legs should be facing **inwards** like in the above photo. The nuts should be on the inside too.

Rotate the crossbar correctly, so the legs will be angled outwards. If it's rotated wrong, the legs could be angled inwards or not straight.



2. If the feet are not yet inserted, then insert them.



3. Arrange the hanging point kits as so. At this point, all of the middle pieces can be connected together (all of the pieces except the top U-piece, and bottom 2 washers and 2 nuts).

So the O-ring is inserted through the plate, the 3 piece bearing is inserted onto the P-ring bolt, and the small metal bar is passed through the top of the O-ring to hold the bearings and O-ring in place.



4. Screw the 2 plastic clamps to the bar (a little at a time on each side), then pass the metal U-piece over the clamp.

You'll have the hanging point partly assembled from step 3, so you can put it onto the U-piece, then use the washers and nuts to fasten it on.

At this point, the O-ring should be able to swivel freely, with the small metal bar holding it in place.



5. The plate can be fastened all the way up to the clamp, so both the plate and clamp are held tight. The O-ring should still swivel freely.



6. Your swing will be attached to the O-rings with carabiners. If the swing is adjustable, then you'll be able to adjust the height off the swing now. If you have padded mats, those can be positioned below the swing.

Safety instructions

When connecting a swing, the swing should be adjusted to be at a safe height that is easy to get on and off.

The stand should be placed on a flat surface free of dangerous objects eg. toys on the ground or other objects that can be tripped over, or nearby objects to bump into. A fall from height or onto a hard surface can result in serious injury to the equipment user; therefore it should be set up and used in a safe manner.

Adult supervision is required.

Important Safety Notes

- Double check that all bolts and connections are tight.
- Supervise any children using the stand, particularly: make sure they can get on and off safely, and make sure they use it in a safe manner.

It is important for adults to instruct children NOT to:

- Walk close to, in front of, behind, or between moving items.
- Get on or off a swing while it is in motion.
- Attach additional items to the stand or swing.
- Wear a bicycle or sport helmet while on a swing.
- Stand or jump on a swing or hang from the stand. Distributed weight is best eg. sitting/laying.

Maintaining the Stand

At the beginning of each play season, adults should

- Check all tubing, carabiners and fittings, making sure the setup is strong.

At the end of the each play season, adults should:

- Keep it in an under-cover location to maximize its life.

Please retain these instructions for future use.